

# Pick Up Bed Dolly

---

Made In USA





**CHAMP**<sup>®</sup>  
Frame Straightening Equipment Inc.



**Auto Body Toolmart**  
**Champ Frame Straightening Equipment, Inc.**  
2545 Millennium Dr., Elgin, IL 60124 (800) 382-1200  
[www.autobodytoolmart.com](http://www.autobodytoolmart.com)

# Parts List

- A** 2 - Bottom Base
- B** 2 - 46-1/2" Square Tubing Cross Bars preassembled
- C** 4 - 29" Square Tubing
- D** 2 - 60" Top Bars with 2 Sliders
- E** 4 - Wheels - 2 with brake 2 without brake, 4 - 1/2" lock washers, 4 - 1/2" nuts
- F** 8 - 5/16" x 2" Bolts
- G** 8 - 5/16" Lock Nuts
- H** 8 - Washers
- I** 4 - Tubing Caps

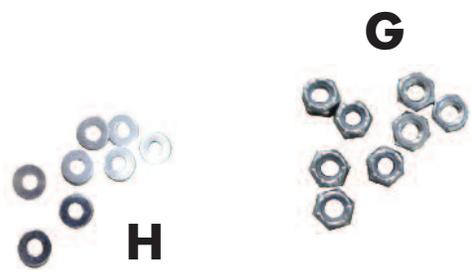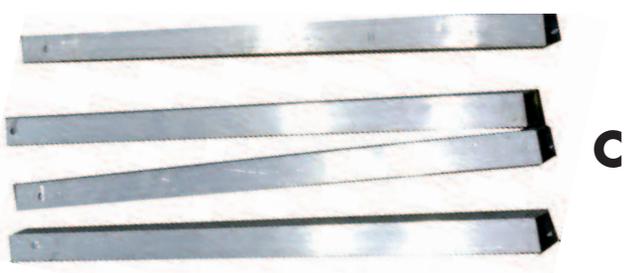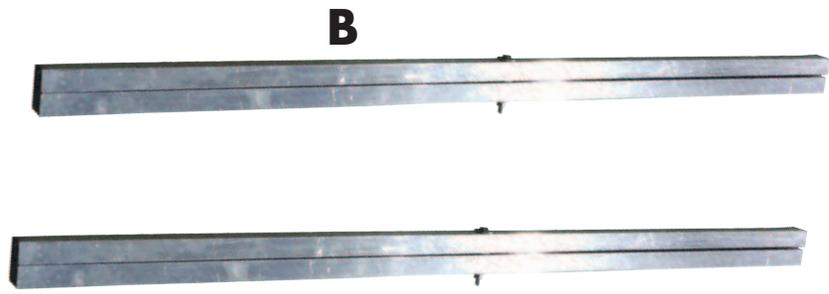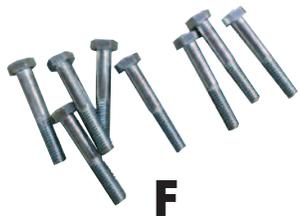

# Instructions

---

1.



- Place the two bottom base pieces parallel on the floor

2.



- Attach wheels to base using the 1/2" lock washers and 1/2" lock nuts.

3.



- Lock wheels to keep base from moving. Insert the 46-1/2" cross bars into the angled square tubing area on the base.

4.



- Attach the 60" top bars to the cross bars. Make sure that the sliders are pointing down towards floor like in the picture above

5.




- Attach the 4 - 29" square tubing pieces. Each piece connects to the base and to the sliders on the top bar.

6.



- Use the 5/16" bolts, 5/16" lock nuts and washers to attach the vertical tubing to the base and the sliders.

7.

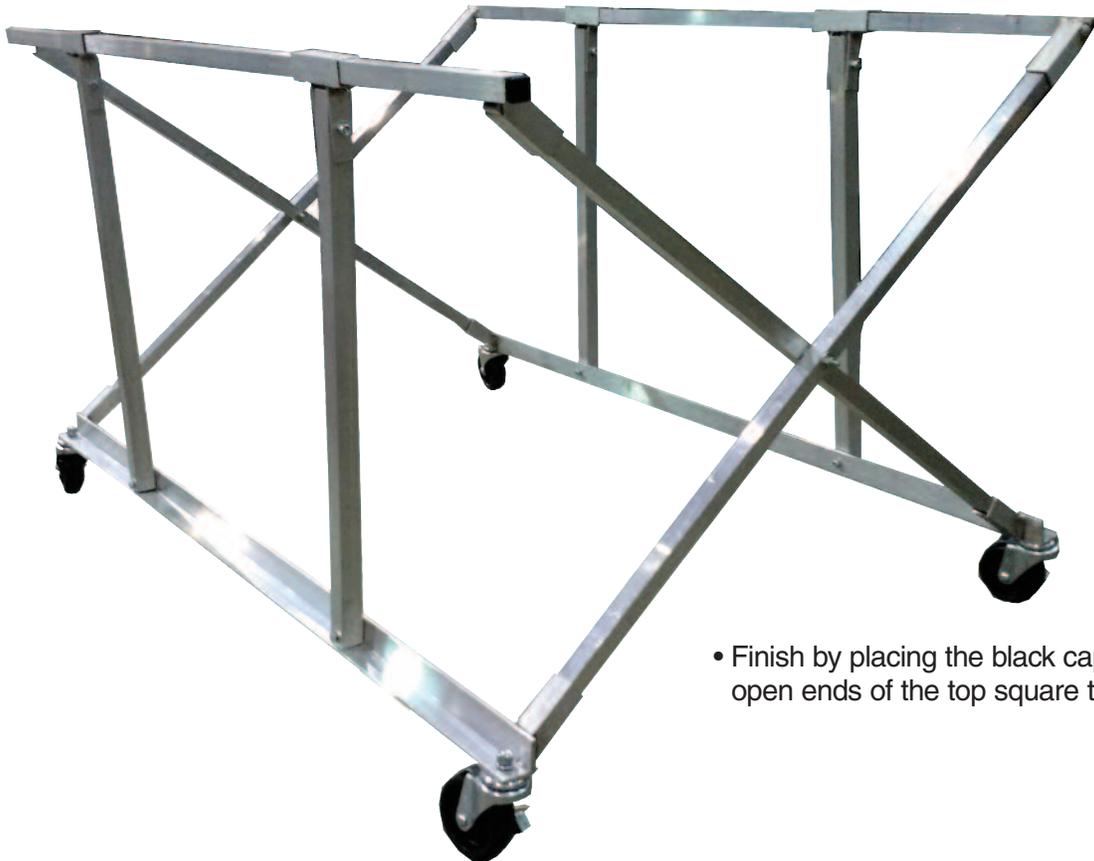

- Finish by placing the black caps on the open ends of the top square tubing bars.